

## Replacing the Battery in the Sensor

Both the console and sensor use a CR2032 battery. The sensor battery was installed in the factory. If the green light no longer flashes on the sensor with the pass of the magnet, it is time to change the sensor battery.

1. With a small screwdriver, remove the 2 screws from the sensor panel.
2. Once you open the panel you will see a pcb board and little hard drive that looks like a watch battery - that is not the battery.
3. Flip over the pcb board into your hand. The CR2032 battery is stored in a large circular silver holder.
4. On that pcb board you will see a little black rectangular piece.
5. With a pen/pencil, slide the battery beginning from that black piece area. The battery will come out from the other end.
6. Replace the battery with a new CR2032 battery positive side up.